

# OS Installation

Guidelines to updating:

- As always, we recommend that external power is applied when updating.
- An SD card is optional to update the unit.
- If you are updating via SD card, you will need access to an SD card reader (with micro adapter).
- If you are updating via device storage or through the desktop installer, you will need an ActiveSync cable.

Download and extract the chosen OS install file located on this site. Pick the proper language OS...

## **DESKTOP INSTALLER METHOD:**

- Make a Windows Mobile Device Center (ActiveSync) connection between your PC and the device.
- Launch the desktop installer on the PC.
- Follow the on-screen instructions.

## **MAIN DEVICE STORAGE UPDATE METHOD:**

- Make a Windows Mobile Device Center (ActiveSync) connection between your PC and the device.
- Extract the files to a folder on the PC.
- Copy the files **to the root directory** of the device (not My Documents) and reboot device when copy is complete.

## **EXTERNAL SD CARD UPDATE METHOD:**

- Extract the files to a folder on the PC.
- On your desktop computer, copy the files **to the root directory** of your micro SD Card. (you don't need to include Thumbs.db if you see it).
- Insert the micro SD card into the micro SD slot and reboot or turn on your device.

## **ALL METHODS:**

- After reboot, you should see the progress bar for the bootloader update followed by the OS update.
- Then it will continue booting.
- You are updated! (The update script file is deleted so no need to remove the micro SD card to avoid updating when you reboot your device)